

BS-1 Hot Shoe Cover 欧盟产品说明书（速卖通粘贴版）

PRODUCT USER MANUAL (Brief Version)

Product Name

BS-1 Hot Shoe Cover

For Nikon D5000 D800 D700 D300 D3X D90 D60 & Universal DSLR Cameras

1. Description

The BS-1 Hot Shoe Cover is a professional camera protective accessory, specially designed for Nikon cameras with hot shoe mounts, including D5000, D800, D700, D300, D3X, D90 and D60. It adopts a precise snap-on design and is made of high-quality soft plastic, which can effectively protect the camera's hot shoe interface (a dedicated slot for connecting flash, microphone and other equipment) from dust, water, scratches and oxidation, and prevent short circuits of hot shoe contacts. It is lightweight, portable and easy to install and remove, helping to extend the service life of the camera's hot shoe components.

- Application: Dustproof, waterproof, scratchproof and anti-oxidation protection for camera hot shoe interface
- Compatibility: Specially for Nikon D5000/D800/D700/D300/D3X/D90/D60; universal for most DSLR/mirrorless cameras with standard hot shoe
- Design: Precise snap-on, easy to install and remove, lightweight and compact
- Material: High-quality soft plastic (durable, anti-aging, non-scratching to camera surface)
- Function: Protect hot shoe contacts, avoid short circuit and signal failure, prevent foreign objects from entering the interface

2. Intended Use

- For protecting the hot shoe interface of Nikon designated models and other standard hot shoe cameras during daily use and storage.
- Suitable for photography enthusiasts and professional photographers to maintain camera equipment and protect the hot shoe interface from damage.
- Used for indoor and outdoor camera carrying and storage, preventing dust, water droplets and debris from entering the hot shoe.
- Not for use as a shooting accessory; do not install when using flash, microphone and other hot shoe-mounted equipment; do not disassemble or modify the product itself.

3. Safety Instructions

- Install and remove the cover gently, do not forcefully snap or pull to avoid damaging the camera's hot shoe mount and contacts.
- Keep away from children under 14 years old to prevent accidental swallowing or choking hazard.
- Do not use the product in high-temperature, high-humidity or corrosive environments for a long time to avoid deformation or aging.
- Do not clean the cover with sharp tools to prevent scratching the product surface and affecting the fit effect.
- Ensure the hot shoe interface is clean and dry before installation to avoid dust and debris being trapped inside, which may cause poor contact of the hot shoe.

4. How to Use

1. Check that the camera's hot shoe interface is free of dust, water and debris, and keep it clean and dry.
2. Align the BS-1 Hot Shoe Cover with the camera's hot shoe mount at the correct angle (align the buckle of the cover with the hot shoe slot).
3. Gently press the cover down until you hear a "click" sound, ensuring it is firmly snapped on and fits tightly with the hot shoe interface.
4. When needing to use hot shoe equipment (such as flash, microphone), pinch the side of the cover and gently pull it up to remove it.
5. After using the hot shoe equipment, reinstall the cover on the hot shoe interface in time to protect it during storage and carrying.

5. EU Compliance Information

- EU Responsible Person: CET PRODUCT SERVICE LTD.
- Address: Osterholzallee 144, 71636 Ludwigsburg, Germany
- Tel: +497-1416432236
- Email: info.cetservice@gmail.com
- This product complies with EU General Product Safety Regulation (GPSR).

6. Storage & Maintenance

- Store the cover in a dry, cool and ventilated place when not in use; avoid direct sunlight and high temperature to prevent deformation.
- Wipe the surface of the cover with a soft dry or slightly damp cloth if stained; dry it naturally before use, do not soak in water.
- Do not use alcohol, gasoline and other corrosive cleaning agents to avoid damaging the plastic material.

- Check the cover regularly for cracks, deformation and loose buckles; replace it in time if damaged to ensure the protective effect.
- Store the cover with the camera together for easy carrying and use.

7. Warranty

Warranty: 180 days from delivery.

The warranty covers quality defects of the hot shoe cover (such as cracks, loose buckles, poor fit), not damage caused by improper installation, violent pulling, high-temperature aging and artificial scratches.

Manufacturer / Importer:

Shenzhen Dister Photography Equipment Co., Ltd.

4th Floor, West Block, Building 63, Majialong Industrial Zone, Nanshan District, Shenzhen City

（注：文档部分内容可能由 AI 生成）