

Photographer's Wristband SET 欧盟产品说明书（速卖通粘贴版）

PRODUCT USER MANUAL (Brief Version)

Product Name

Photographer's Wristband SET

Stop Lens Zoom Creep / Aperture + Focus + Focal Length Assistant

1. Description

This photographer's wristband set is a professional photography accessory, mainly designed to prevent lens zoom creep (the lens barrel slides automatically due to gravity) and assist photographers in quickly adjusting aperture, focus and focal length during shooting. It is compatible with most DSLR and mirrorless cameras, providing secure camera fixation and convenient operation assistance, effectively improving shooting efficiency and stability.

- Application: Prevent lens zoom creep; assist in aperture, focus and focal length adjustment; secure camera to wrist
- Compatibility: Universal for most DSLR/mirrorless cameras
- Material: High-quality nylon + elastic fiber + anti-slip silicone (comfortable, durable and sweat-resistant)
- Design: Adjustable length, anti-slip wrist pad, lightweight and portable

2. Intended Use

- For photographers to fix the camera on the wrist, prevent camera drops and lens zoom creep during shooting.
- For photography enthusiasts and professional photographers to assist in adjusting aperture, focus and focal length quickly, especially suitable for dynamic shooting, landscape photography and macro photography.
- Not for use as a load-bearing tool; not suitable for cameras exceeding 3kg; not for internal camera or lens maintenance.

3. Safety Instructions

- Check the wristband's tightness before use; ensure it is firmly fixed on the wrist to avoid camera drops caused by loose straps.

- Keep away from children under 14 years old to prevent accidental entanglement or suffocation.
- Do not use in wet, high-temperature or sharp-object environments to avoid damaging the wristband's material.
- This is a professional photography accessory, not a toy; do not pull or tear it violently.

4. How to Use

1. Adjust the wristband length according to your wrist size, ensure it is comfortable and tight (not too loose to avoid slipping).
2. Fix the wristband to the camera's strap lugs or designated mounting points securely.
3. When shooting, wear the wristband tightly on your wrist; the anti-slip pad can enhance stability and reduce arm strain.
4. To prevent zoom creep, adjust the lens to the desired focal length, then use the wristband's auxiliary strap (if included) to fix the lens zoom ring gently.
5. During shooting, you can adjust the camera's aperture, focus and focal length with one hand while the wristband secures the camera, ensuring quick and stable operation.
6. After use, remove the wristband from the camera and store it properly.

5. EU Compliance Information

- EU Responsible Person: CET PRODUCT SERVICE LTD.
- Address: Osterholzallee 144, 71636 Ludwigsburg, Germany
- Tel: +497-1416432236
- Email: info.cetservice@gmail.com
- This product complies with EU General Product Safety Regulation (GPSR).

6. Storage & Maintenance

- Store in a dry, cool and ventilated place; avoid direct sunlight and high temperature.
- Clean with a soft dry cloth after use; if stained, wipe gently with a damp cloth and dry immediately (do not soak in water).
- Do not use corrosive detergents to clean the wristband, so as not to damage the material and anti-slip performance.
- Regularly check the wristband's stitching and buckle, replace it in time if there is wear or damage to avoid camera drops.

7. Warranty

Warranty: 180 days from delivery.

The warranty covers quality defects of the wristband set (such as loose stitching, broken buckle, damaged anti-slip pad), not improper use, violent pulling or camera damage caused by incorrect operation.

Manufacturer / Importer:

Shenzhen Dister Photography Equipment Co., Ltd.
4th Floor, West Block, Building 63, Majialong Industrial Zone, Nanshan District, Shenzhen City

（注：文档部分内容可能由 AI 生成）